




Kits Embrague

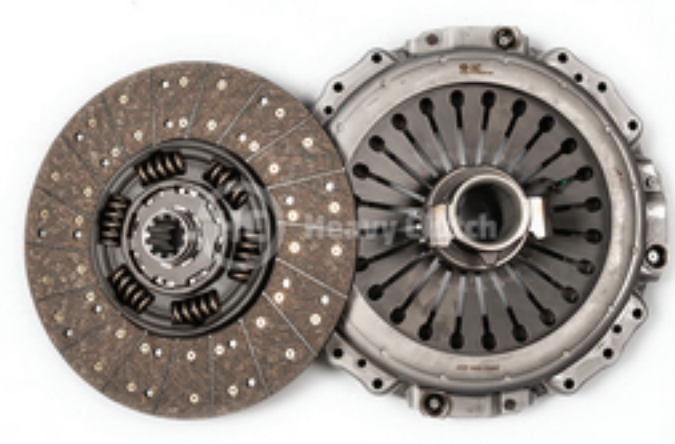


HC 3400 000 235
KIT IVECO 430 10E CCH

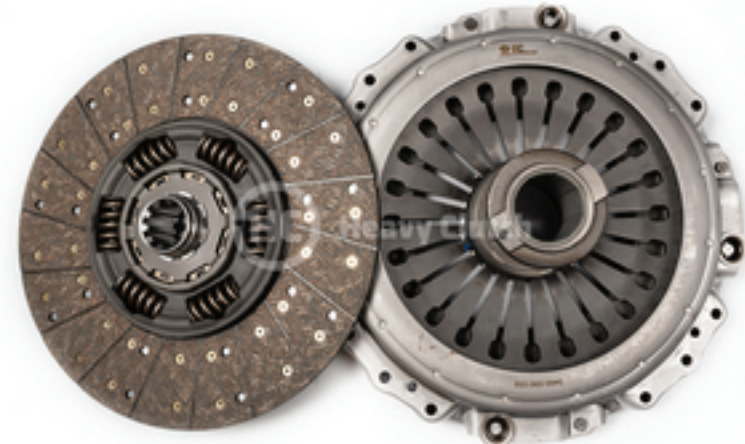


HC 3400 000 249
KIT MERCEDES 1934/1634 430 10E CCC

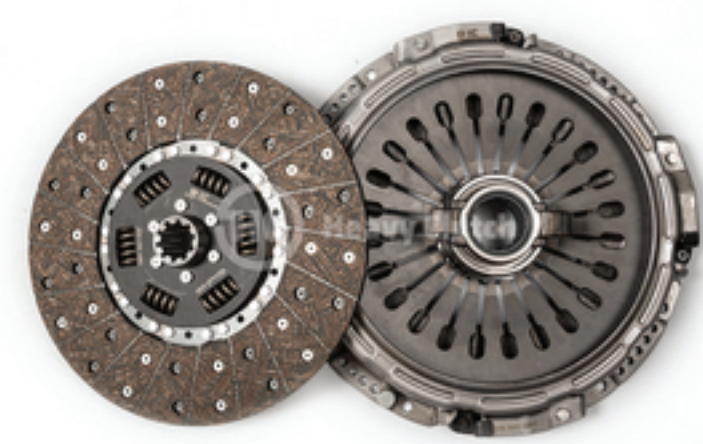


HC 3400 000 254
KIT EMBRAGUE MERCEDES 710 TIRAR 310MM

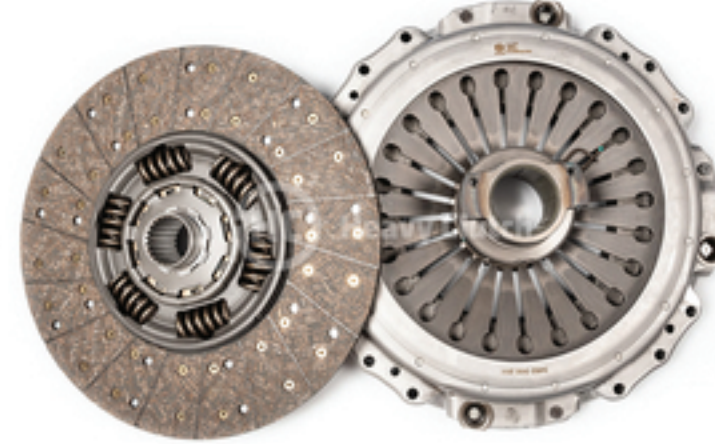


HC 3400 000 255
KIT SCANIA 430 24E CCC

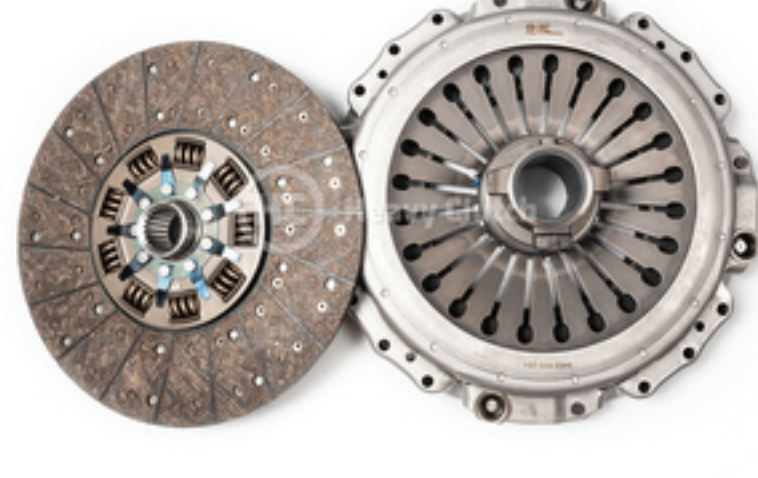


HC 3400 000 322
KIT SCANIA 430 22E GUIA FINA CCC

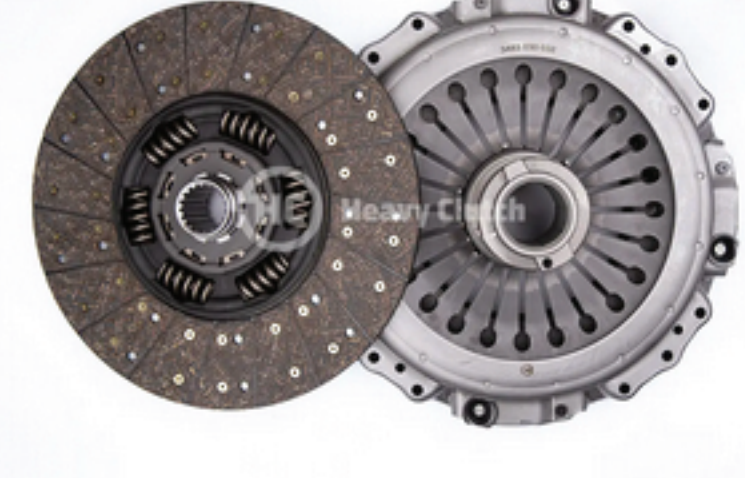

HC 3400 000 326
KIT MERCEDES AXOR 430 18E CCC

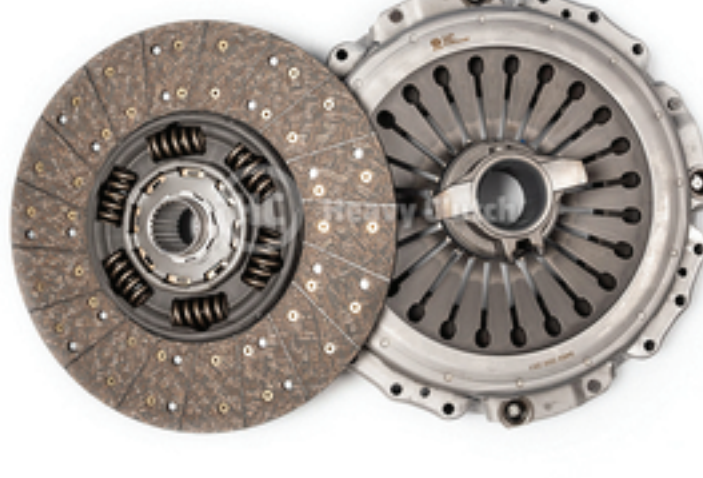


HC 3400 000 331
KIT SCANIA 430 24E GUIA GRUESA CCC

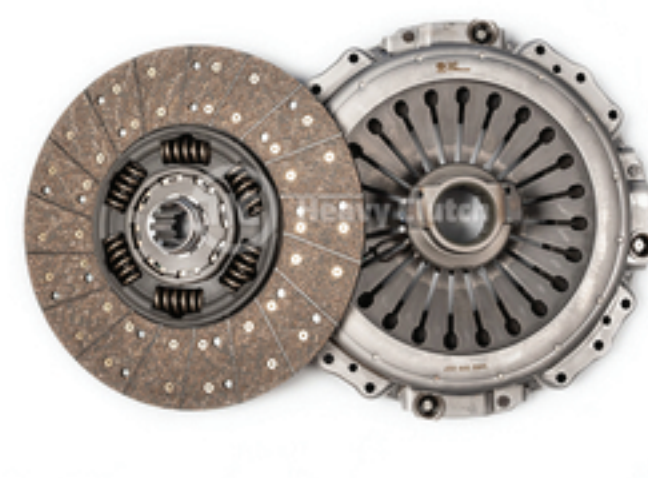


HC 3400 000 359
KIT MERCEDES 0500 430 10E CCH




HC 3400 000 651
KIT EMBRAGUE IVECO 430 MM - 10 ESTRIAS

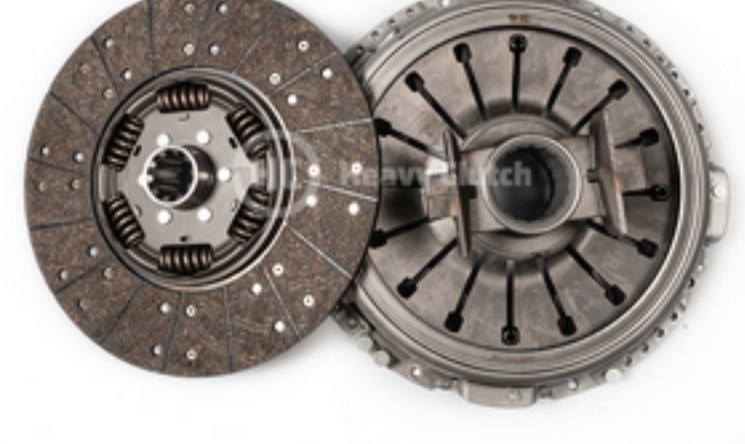


HC 3400 000 773
KIT FORD VW 350 10E TUBO CCC

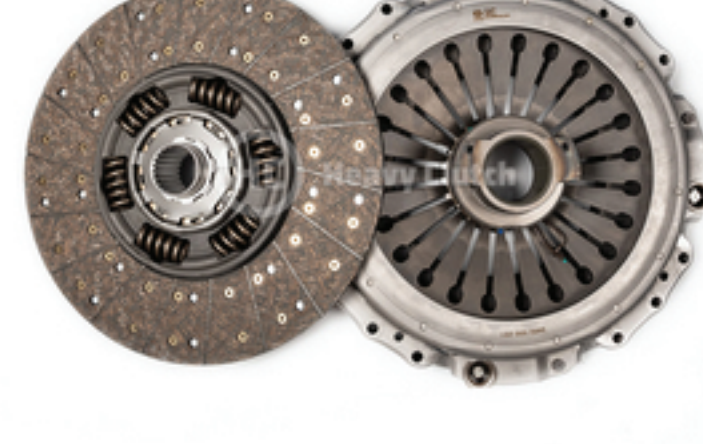


HC 3400 000 777
KIT EMBRAGUE SCANIA 430 MM / 24 E (6453)

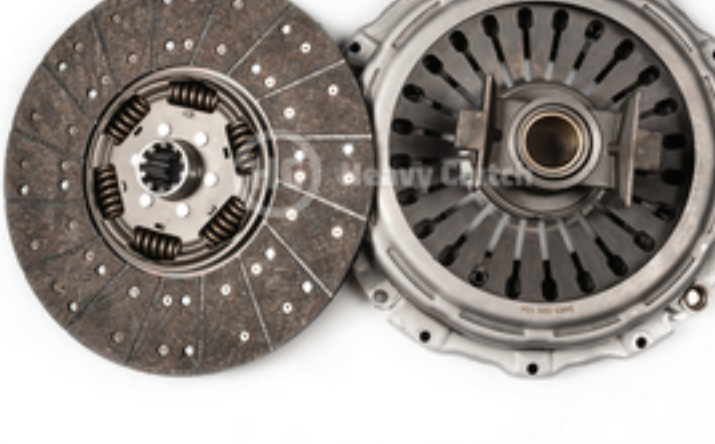


HC 3400 000 794
KIT EMBRAGUE 220CV 380MM

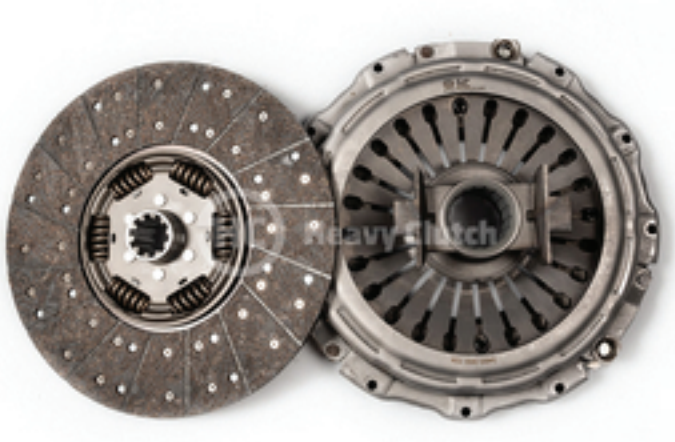


HC 3400 000 795
KIT EMBRAGUE 220CV 380MM

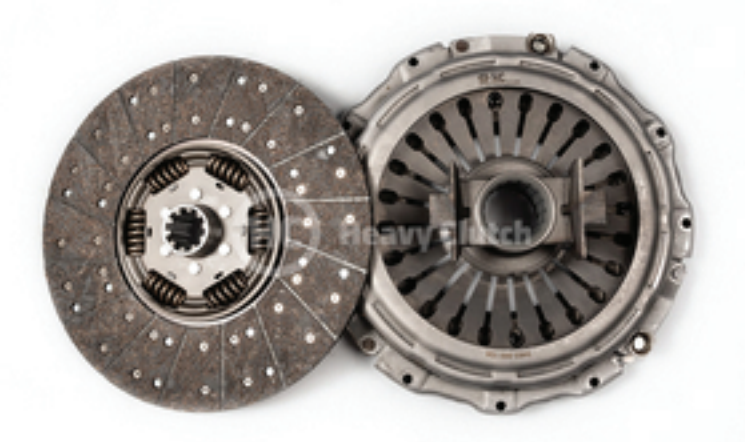


HC 3400 000 797
KIT EMBRAGUE FORD CARGO 380 TUBO CCC

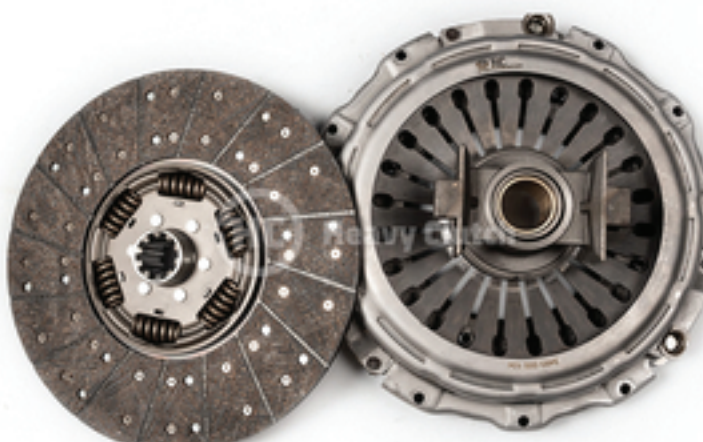


HC 3400 000 798
KIT CARGO DIRECTA 380 10E CCC

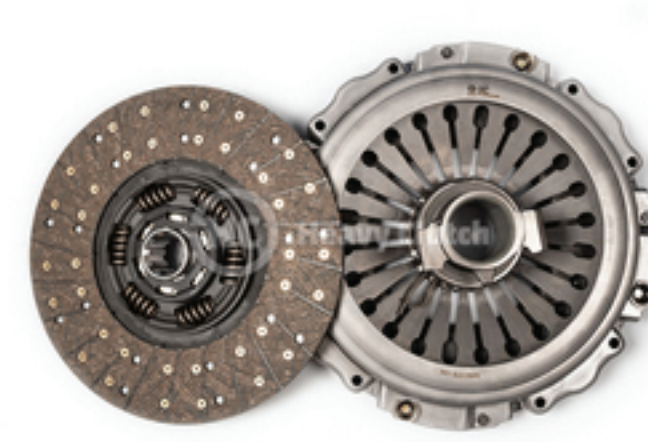


HC 3400 000 806
KIT EMBRAGUE CURSOR CAVALLINO 400 10E CCC

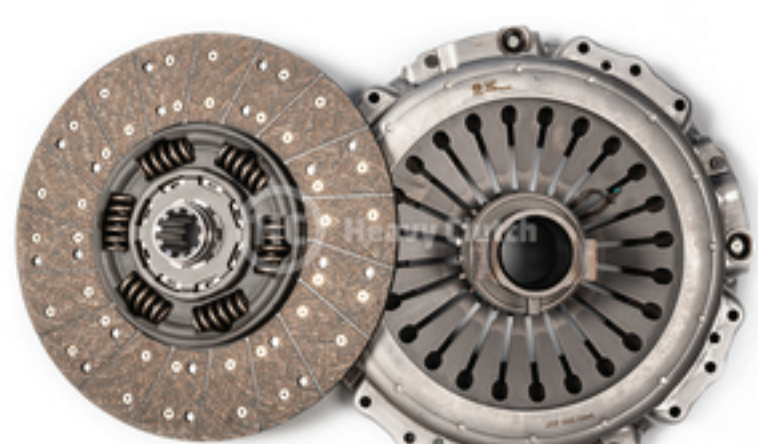


HC 3400 000 858
KIT IVECO STRALIS 430 10E CCC

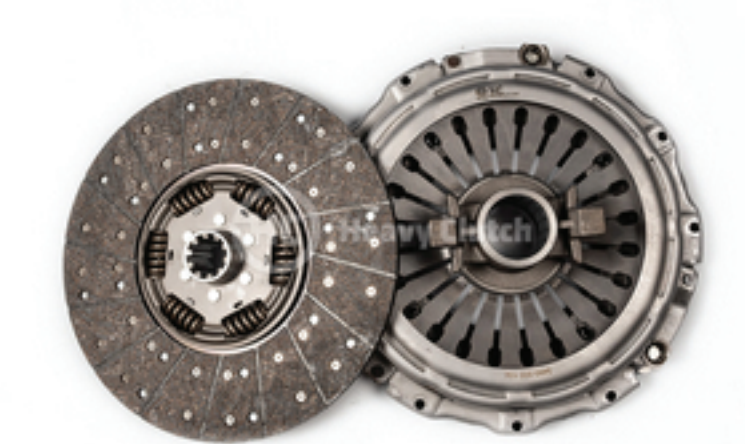


HC 3400 001 071
KIT IVECO TECTOR 365/380 CCC

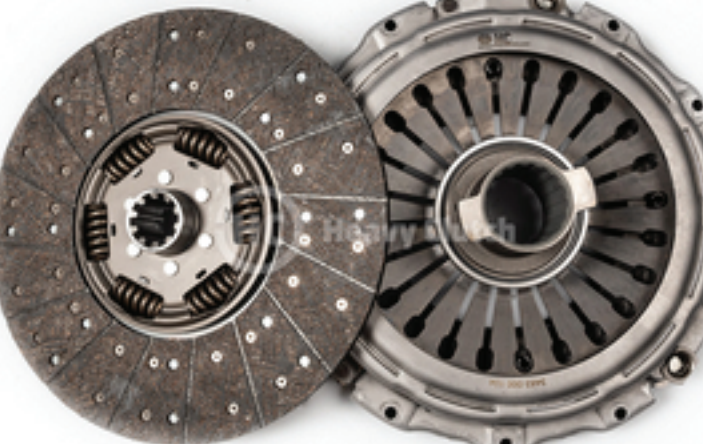


HC 3400 000 114
KIT CARGO ELECTRONICO 380MM 2011/... CCH

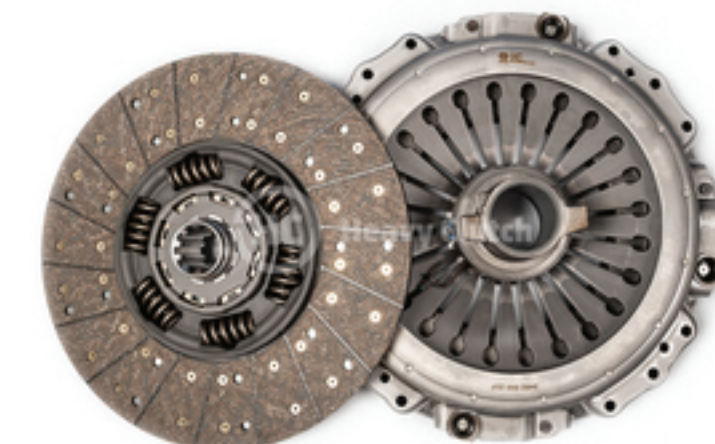

HC 3400 000 140
FORD CARGO 1932 ELECTRONICO 2011 CCH

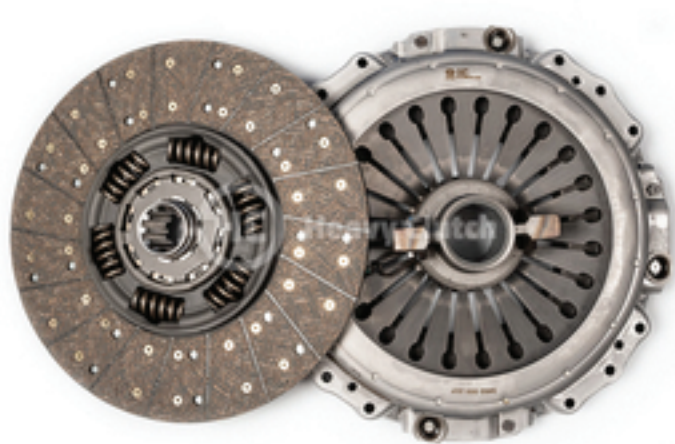


HC 3400 000 233
KIT FORD 2042 430 10E CCH

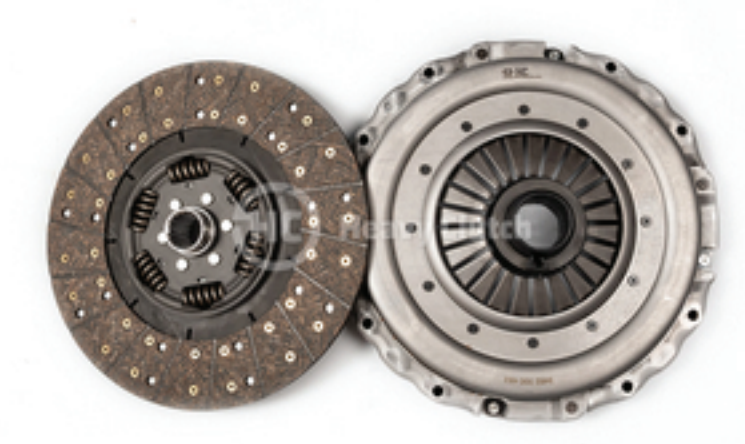


HC 3400 000 251
KIT MERCEDES 395 18E CCH




HC 3400 000 332
KIT SCANIA 420 22E CCH

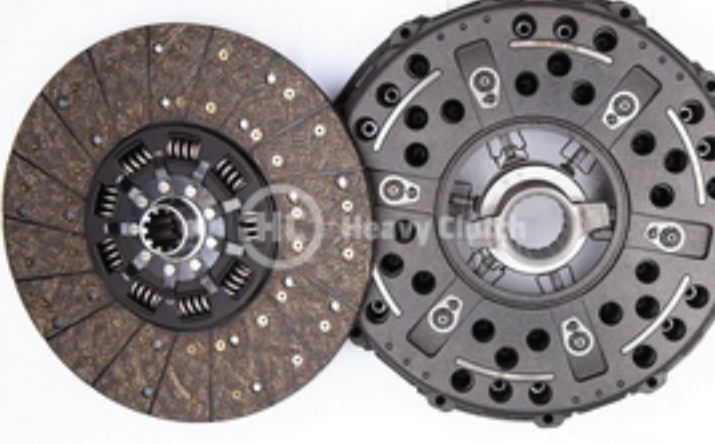


HC 3400 000 494
KIT MERCEDES 420 10E FUNDICION CCH 1633

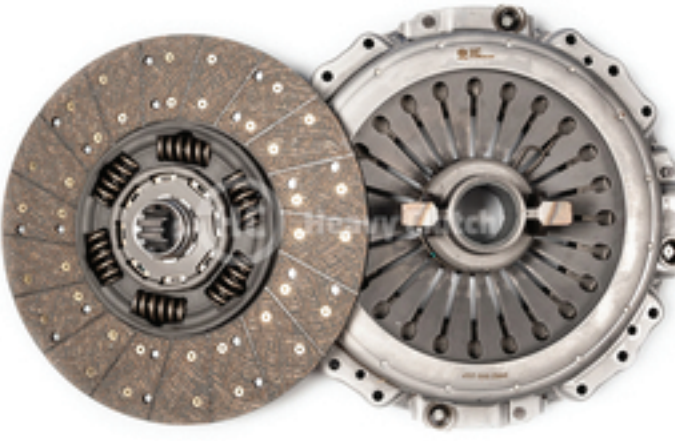


HC 3400 000 517
KIT EMBRAGUE VW CONSTELLATION 19-320

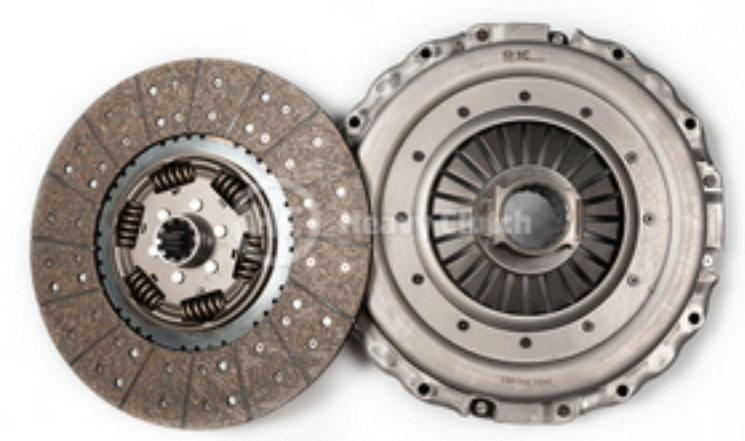


HC 3400 000 518
KIT VW CONSTELLATION 17-250 395 10E CCH

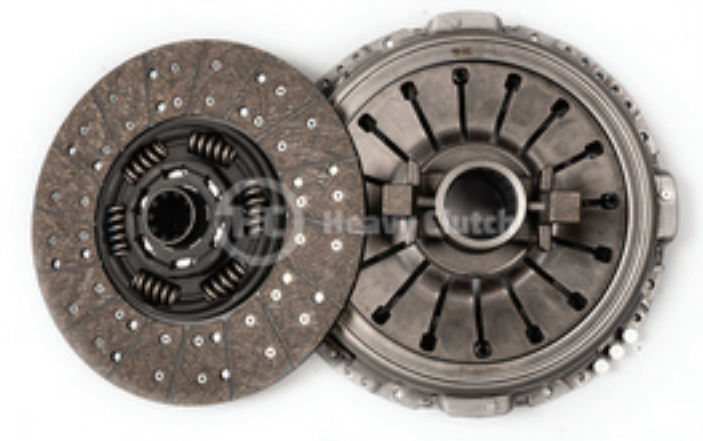


HC 3400 600 109P
KIT IVECO TECTOR 350 PREMORTIGUADO

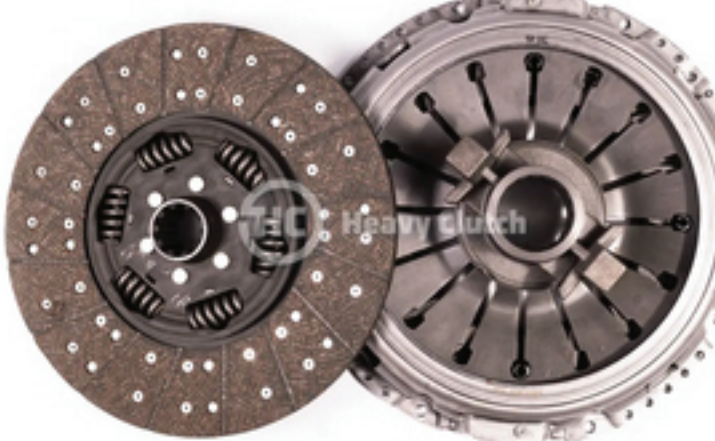

HC 3400 600 109F
KIT IVECO TECTOR 350 FIJO

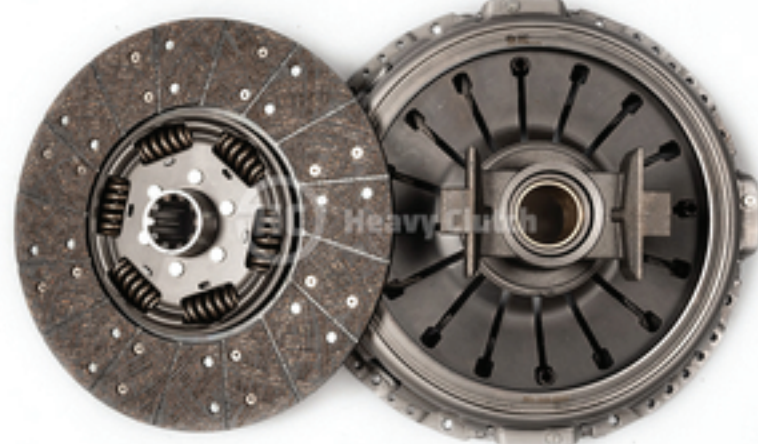


HC 3400 000 772
KIT FORD VW 350 10E DIRECTA CCH

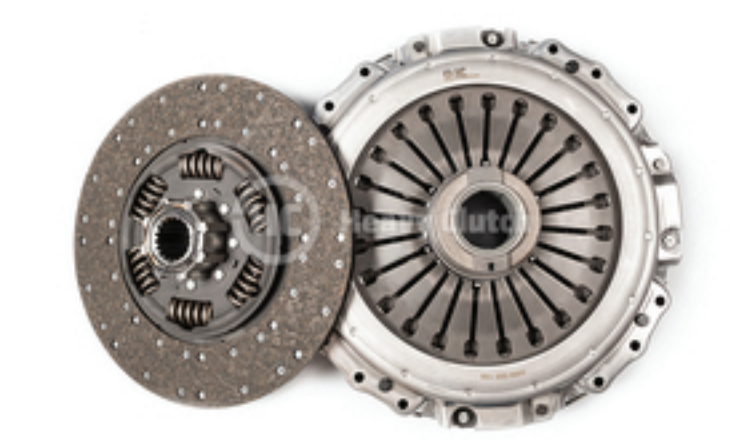


HC 3488 000 158
KIT EMBRAGUE BDISCO ACTROS



HC 3400 000 155
KIT VOLVO 430MM CON CRAPODINA ELECTRONEUMÁTICA

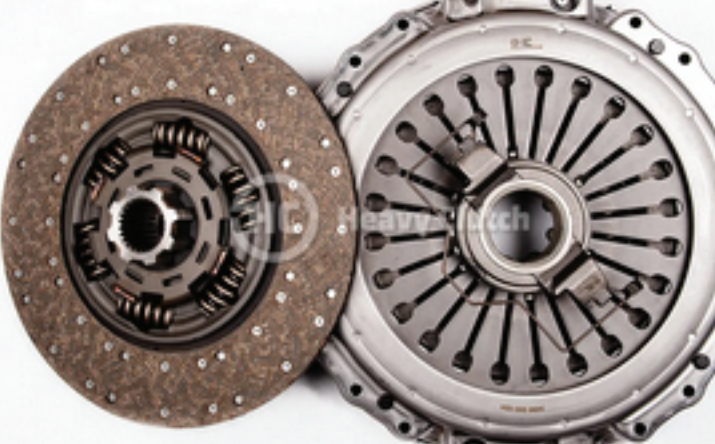


HC 3400 700 629
KIT EMBRAGUE VOLVO BI-DISCO 400MM 24E

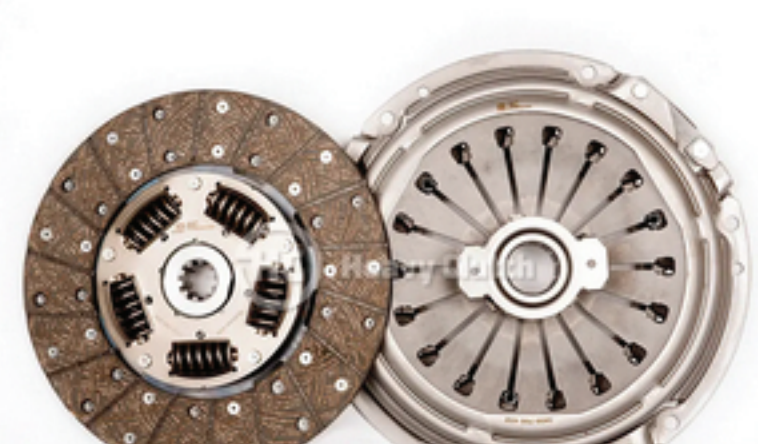


HC 3400 700 432
KIT DAILY 280MM 10E (II/III/IV) HASTA 2008




HC 3400 700 433
KIT DAILY 280MM 10E (II/III/IV) DESDE 2008

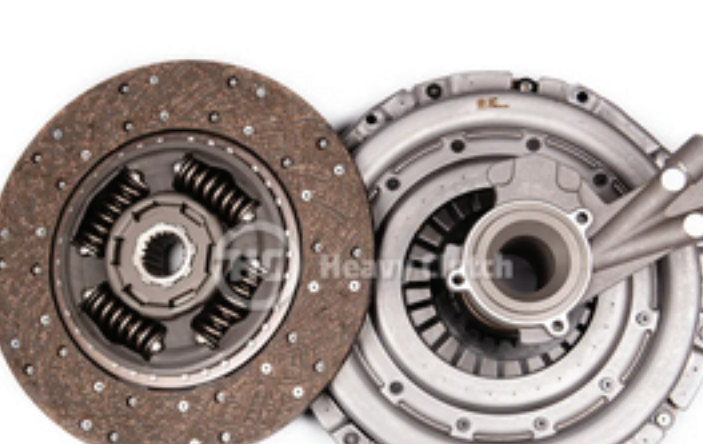


HC 3400 710 015
KIT EMB. MB 362 MM 18E ACT. HIDRAULICO

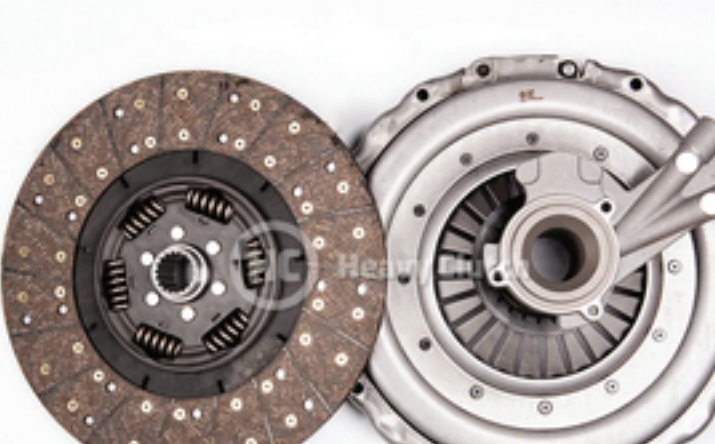

HC 3400 710 012
KIT EMB. MB 395 MM 18E ACT. HIDRAULICO

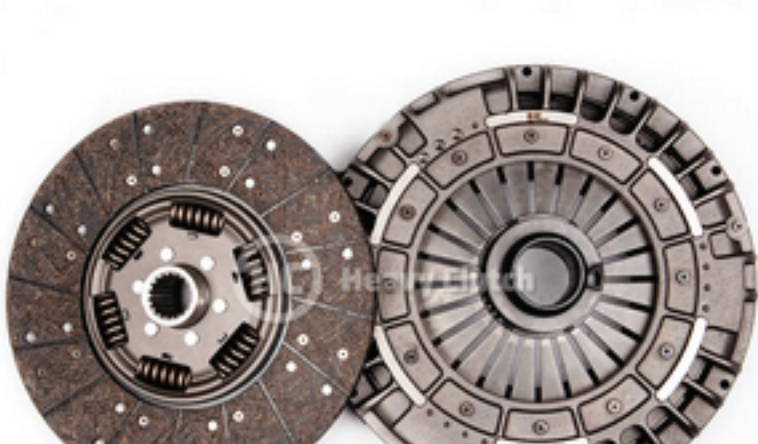


HC 3400 000 673
KIT EMBRAGUE

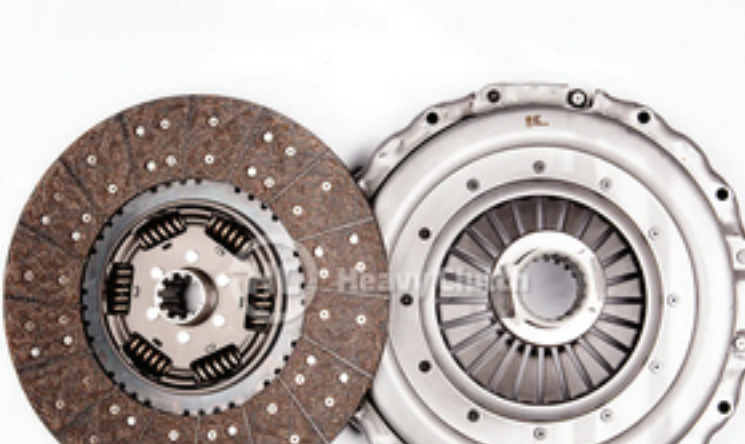


HC 3400 001 174
KIT EMBRAGUE




HC 3400 000 907
KIT EMBRAGUE 330 MM MB

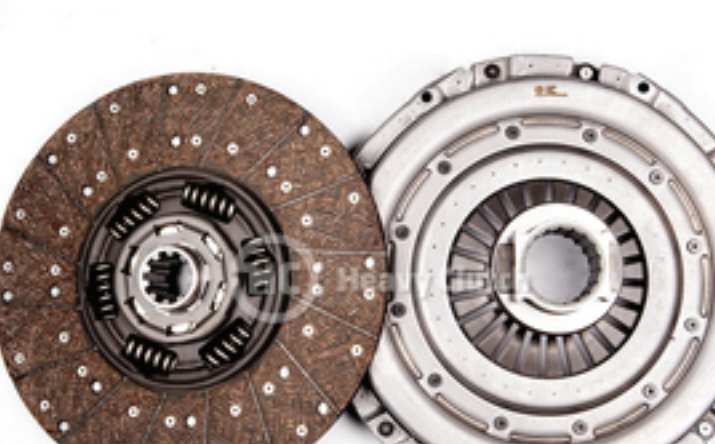


HC 3400 000 513
KIT EMBRAGUE

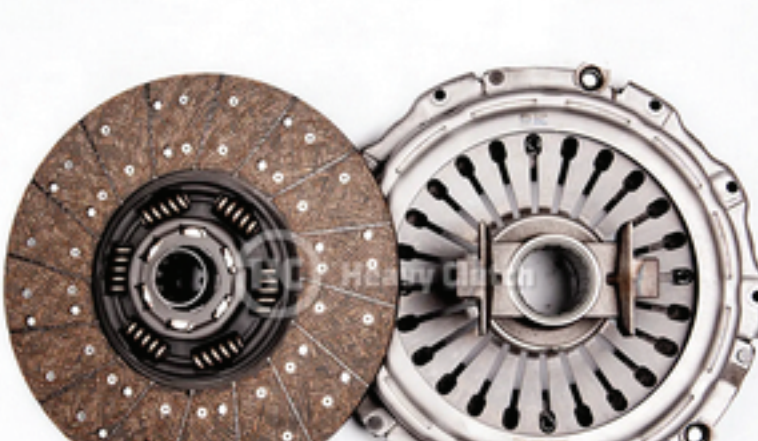

HC 3400 000 489
KIT EMBRAGUE

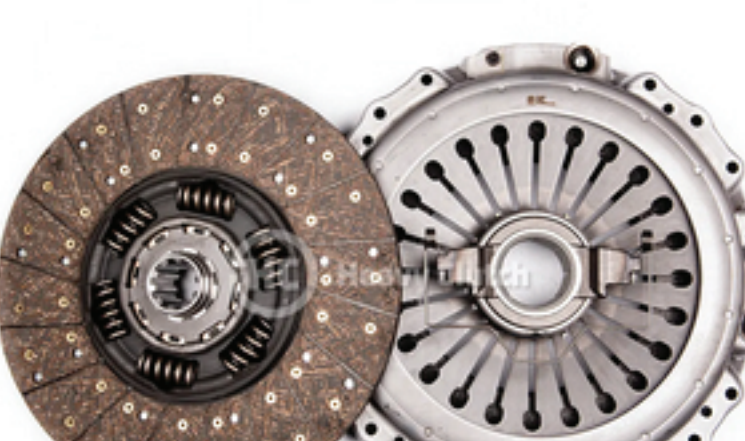


HC 3400 000 335
KIT VOLVO 430 10E CRAPODINA MEDIANA

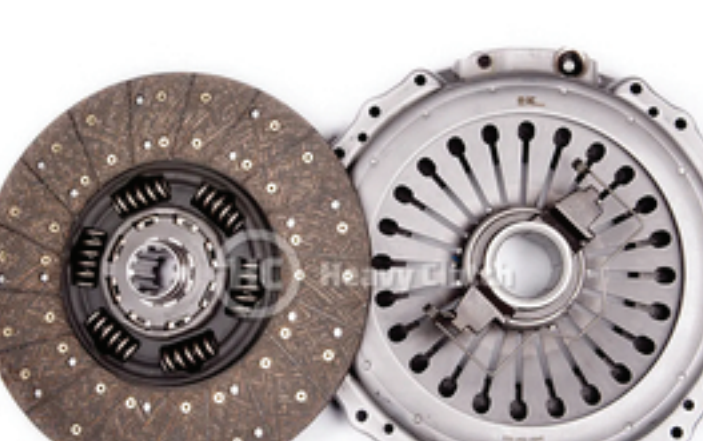

HC 3400 000 334
KIT VOLVO 430 10E CRAPODINA BAJA



HC 3400 000 311
KIT EMBRAGUE MB 362 MM 18E CRAPO PLASTICA

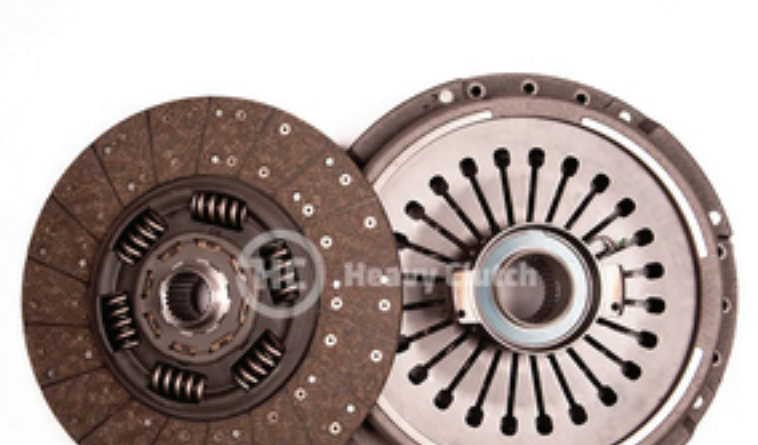

HC 3482 000 589
KIT SCANIA TOMA DE FUERZA




HC 3400 365 114
KIT FORD CARGO ELECTRÓNICO 365MM 104108-2




HC 3400 365 794
KIT FORD CARGO SOBRE DIRECTA 365MM 104102-1



HC 3400 365 795
KIT FORD CARGO TUBO GUIA 365MM 104101-1

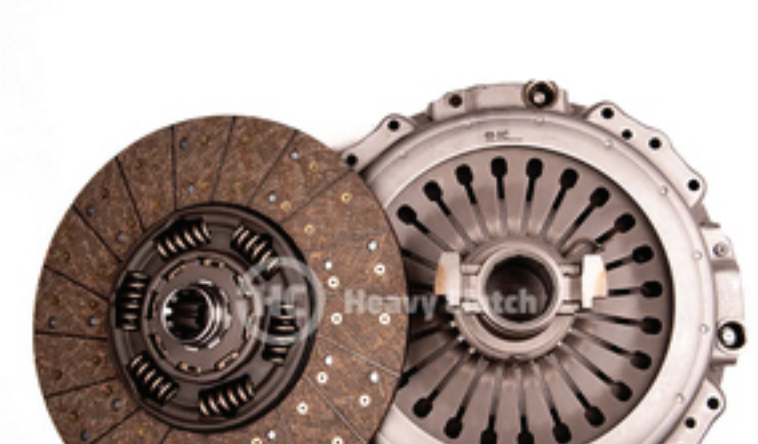


HC 3000 954 322
KIT EMBRAGUE

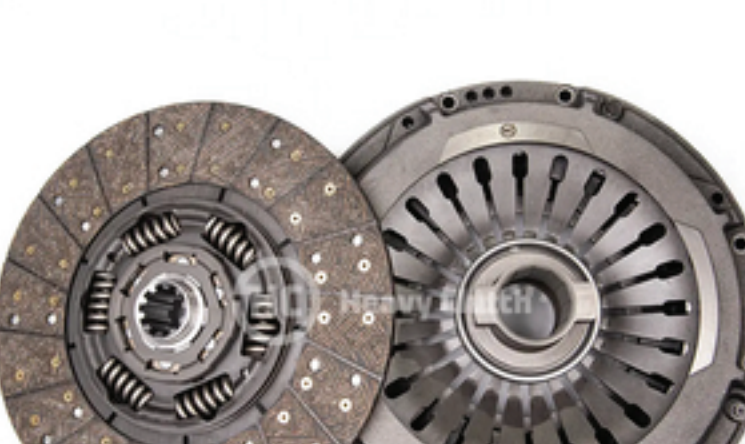

HC 3400 001 115
KIT EMBRAGUE



HC 3400 000 665
KIT EMBRAGUE

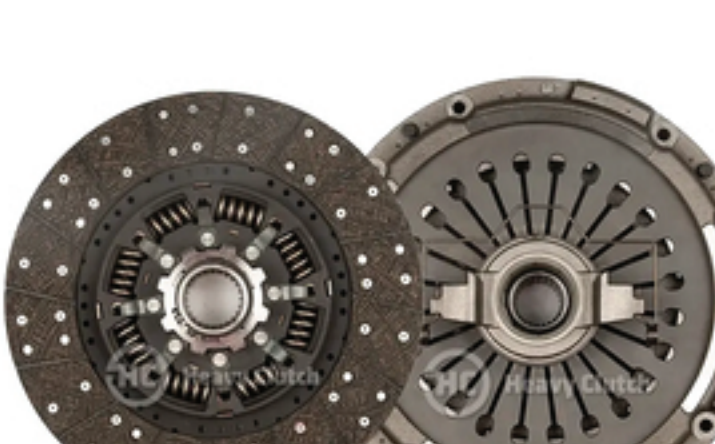

HC 3488 019 032
KIT VOLVO BI DISCO 380MM



HC 3488 000 160
KIT AXOR / ACTROS CON TOMA DE FUERZA



HC 3000 000 135
KIT EMBRAGUE FORD 330MM (CRAPODINA BAJA)



HC 3000 000 137
KIT 330MM FORD 4000/CON (CRAPODINA MEDIANA)



HC 3000 000 139
KIT 330MM FORD/VW (CRAPODINA ALTA)



HC 3000 954 319
KIT EMBRAGUE



HC 3400 000 672
KIT EMBRAGUE



HC 3400 000 150
KIT EMBRAGUE



HC 3400 700 643
KIT EMBRAGUE MB 0500 AUTOMATIZADO